

# Giftware Display Hutch G4872 Assembly Instructions

## Kit Contents:

2-sides w/tracks 11 1/4"x 71 1/4"

2-back panels 24"x72"

1-top 12 3/4"x 51" routed edges

1- paneled door assembly 30"x 48"

4-shelves 11 1/4"x 46 1/2"

1-shelf 10 1/2"x 46 1/2"(inside cabinet)

## Screw pack Contents:

20 - 1 1/4" screws

24 - nails

6 - 2" screws

6 - 3" screws

2 - pan head screws


2 - knobs

12 - shelf supports



**Before beginning the project, unpack the box and lay out the pieces and hardware.  
The box can be flattened to use as a work surface.**

**Step 1:** Place the two sides across from each other with the tracks facing inward. The metal glides will be the bottom of the unit. **Photo 1** Place the bottom shelf (11 1/4"W) onto the top of the bottom cleats of the two sides. Attach by inserting three 2 1/2" screws per side into the predrilled holes of the cleat bottoms & into the shelf. See **Photo 2**

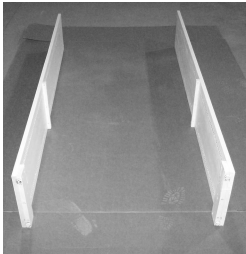

**Photo 1**



**Photo 2**



**Photo 3**



**Photo 4**

**Step 2:** Place the second shelf (11 1/4"W) onto the top of the side cleats and attach like the first, using three 1 1/4" screws per side. **Photo 3**

**Step 3:** Position the top board with the decorative routed edges facing down and toward the front of the unit. The back of the top board will be flush with the back of the unit. The top board overhangs on both sides. Attach one end of the top board with three 2" screws inserted down through the predrilled holes and into the sides. **Photo 4** Before attaching the other side of the top, measure across the outside of the unit to make sure it is 48" and then attach the other side using three 2" screws inserted down through the predrilled holes in the top board and into the sides.

**Step 4:** Position the door assembly into the unit with the door latches on the top so that it fits squarely into the bottom of the hutch. Attach the bottom of the door unit by inserting four 1 1/4" screws into the predrilled holes in the bottom cleat. **Photo 5** Open the doors and attach the top of the door unit with four 1 1/4" screws inserted into the predrilled holes in the top cleat. **Photo 6** Next attach the sides of the door unit by inserting three 1 1/4" screws per side into the predrilled holes of the side cleats. **Photo 7**



**Photo 5**



**Photo 6**



**Photo 7**

**Step 5:** Attach the door knobs by inserting the pan head screws in through the inside of the predrilled holes in the door fronts and into each knob and tighten. **Photo 8** Turn the unit over to attach the back panels. Lay the first panel so that the beaded side faces the front of the unit and the ship lap is in the center of the unit. Lay the second back panel the same way so that the ship lap sides of each panel fit together. The top of each panel should be flush with the top of the unit. Attach with 8 nails per long side and 4 nails per top and bottom. **Photo 9**



**Photo 8**



**Photo 9**

**Step 6:** Stand the unit upright and position the shelf clips for the shelves. The smaller shelf 10 1/2"W goes inside the door unit.

**For questions or ordering information contact The Maine Bucket Company's  
customer service at 1-800-231-7072  
[www.mainebucket.com](http://www.mainebucket.com)**